

FITTING INSTRUCTIONS FOR TANK/SEAT SLIDERS

- 1. Prepare the tank / seat so that the surface is thoroughly cleaned. This is best done with rubbing alcohol.

 2. When the surface is cleaned, do a quick mock-up to confirm fitment and location. Apply masking tape in a few places around the slider to mark where you will stick the slider.

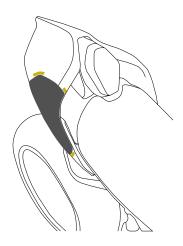

- 3. Clean the inside of the tank \prime seat slider to ensure no contaminants are on it.
- 4. Peel the label on the inside of the product to reveal the adhesive. The adhesive is already applied to the product. Stick the slider to the place you have marked and press firmly.

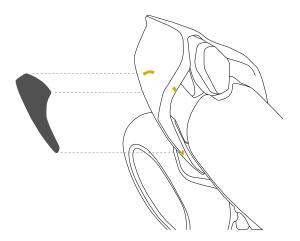

5. At the end, remove the masking tape.

